

DROP IN SHELF AND DRAWER UNIT

MOD DR30-D

INSTALLATION SHEET


NO TOOLS REQ.

For a proper installation please follow step by step the sheet provided in the drawer.



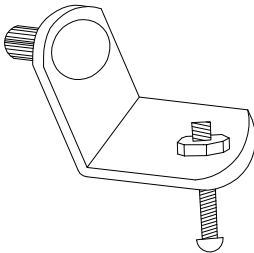


AVAILABLE IN:

- DRY OAK
- CHERRY
- ESPRESSO

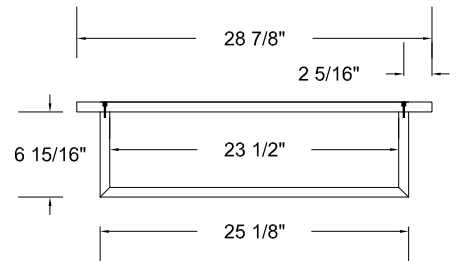

HARDWARE PACK

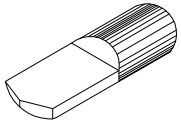DESCRIPTION		QTY
SHELF SUPPORT PINS (Place shelf support pins where you desire your drop in shelf and Drawer Unit yo be set).		4
8 mm DOWELS (See figure No.2).		2
BACK HOLDOWN SUPPORT (See Figure No.1).		2

DEAR CUSTOMER:

To ensure that you have a speedy and pleasant time assembling your unit **PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE BEGINNING ASSEMBLY.**

If you need assistance, **DO NOT CALL THE STORE**, call us.

Our Customer Service Group is here to help you.

**CALL BETWEEN 8:00am to 3:00pm
PACIFIC TIME.**

Please be sure to follow the construction order in the Assembly Manual and complete each step before you proceed.

Call:

USA:

Plycraft Industries Inc.
2100 E. Slauson Ave.
Huntington Park, CA 90255
Email: plycraft@ix.netcom.com

Toll Free Telephone # 1-800 -7659035
Tel # 1-323-587-8101
Fax # 1-323-587-8220.


FOR PROPER INSTALLATION:

Follow **STEP BY STEP** the sheet provided in the drawer.

Figure No.1

NOTE:

Please refer to Figure No.1 so you can locate where the back holdown support pin must be placed.

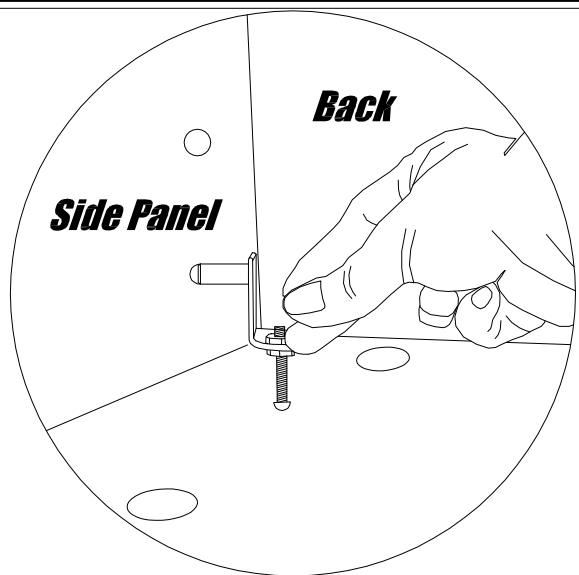

FOR PROPER INSTALLATION:

Follow **STEP BY STEP** the sheet provided in the drawer.

Figure No.2

NOTE:

Please refer to Figure No.2 so you can locate where the dowel pins must be placed.

* Dowel Pins must be inserted once drawer installed see step 5.



IMPORTANT:

Dear Customer, please make sure the two dowels are inserted completely in to the holes to prevent the **DRAWER FRONT** from coming out.